

# Air-Weigh

## Air-Weigh Date Time Printer Instructions

### PN 1250



**Note:** A 3/4" hole will need to be drilled in the dash for mounting cable PN 014-0400-037 (the dash connection point). Remove the hex nut and run the cable through the hole. Secure the connector from behind the dash using the hex nut. Do not over tighten.

**The Martel does not turn on with vehicle power.** You must manually turn it on each time, by pushing the **POWER** button. A brief press of the **POWER** button turns the printer on, the Status indicator will illuminate and the printer mechanism will reset. A brief press of the **POWER** button will turn the printer off.

**DATE/TIME:** To set the date and time for printouts the printer must be connected to the comlink and powered up.

#### **To set the date and time values:**

Press **ESC** until **VIEW WEIGHTS** is flashing. Down arrow until **PRINT/SETUP** is flashing, press **ENTER**

**PRINT MENU** is flashing, press **ENTER**.

**DATE / TIME** is flashing, press **ENTER**.

**SELECT ITEM:** Program by pressing the arrows until a time or date value is flashing, and then press **ENTER** to program it.

Use arrows to change values, and then press **ENTER** again to accept the change.

#### **To print weights shown on Air-Weigh gauge:**

Press **ESC** until **VIEW WEIGHTS** is flashing. Down arrow to **PRINT/SETUP**, press **ENTER**.

**PRINT MENU** is flashing, press **ENTER**.

**PRINT REPORT** is flashing, press **ENTER**.

Scale briefly displays **REPORT IN PROGRESS**.

Press **ESC** three times to return to main screen.

# Air-Weigh

## Air-Weigh Date Time Printer Instructions

The printer incorporates an LED indicator to report its condition. If there is a fault, the LED will flash in sequence. The fault can be identified by counting the number of flashes.

LED Status indicator flash sequence:

LED Indication	Condition	Solution
On	Printer On	-
Off	Printer Off or Asleep	-
* * *	Paper Out	Replace roll
** ** **	Thermal head too hot	Allow head to cool
*** *** ***	Power below 10V DC	Check supply voltage

Replacing the Paper Roll, P/N 010-5786-000 – If the paper roll needs replacing, open the paper reservoir lid by pulling upwards on the clear part of the lid until the lid releases. Lift the lid up. Remove paper spool. Reel off a few inches from a new roll of paper, and hold this part outside the printer as the roll is placed in the reservoir. Close the lid by applying equal amounts of pressure until the lid is in locked position. Now tear the excess paper away, towards the front of the printer. (Tearing paper in another direction can cause a paper jam.)



It is possible to change the printer parameters by pressing the POWER button for longer than 5 seconds, which will activate the programming mode. If this has happened, power down the printer and then press and hold the POWER button for 3 seconds until a status report is output. RS-232 PORT information should be: Baud Rate – 9600, Parity – None, Data Bits – 8, Stop Bits – 1, Handshake – None. Contact Air-Weigh Support at (888) 459-3247 for help resetting these values.