

5800 Series Trailer Scale for Trailers with Front and Rear Axles



Air-Weigh's latest version of trailer scale measures and displays the weights on the two axle groups of a trailer with a front and rear axle. The Scale works on air-ride equipped trailers with a height control valve on each front and rear axle. It converts pressure in the air suspension into a very accurate on the ground weight.

When used in combination with an Air-Weigh tractor scale, the scale weights from a single trailer are multiplexed automatically over the trailer's wiring to the tractor, where they are displayed along with the vehicle (tractor plus trailer) steer, drive, GVW and Net weights.

Easy to Operate – Air-Weigh's simple menu makes it easy to setup and calibrate your scale. Anyone can learn to use Air-Weigh scales in just a few minutes. Air-Weigh has both instructional cards and video's available for training drivers on proper scale operations.

FEATURES

- Displays both front and rear axle weights along with total GVW – Accurate to 300 pounds per axle group
- Warning and overweight alarm outputs
- Transmits weight info to tractor scale via FSK
- Alternates between two displays - Front and Rear
- Dual point Calibration
- 3 year limited warranty

Air-Weigh[®]

To Order - Toll Free: 1-888-459-3444
Main Office and International: 1-541-343-7884
Website: www.Air-WeighScales.com

Customer Support: 1-888-459-3247

1730 Willow Creek Circle
Eugene, Oregon 97402 USA

All rights reserved. Contents accurate at time of publication. © 2003