

LoadMaxx Scales Now Measures and Displays Lift Axle Weight



Air-Weigh's latest version of the LoadMaxx Truck Scale measures and displays lift axle weight along with steer and drive axle weights for selected models.

Easy to Operate and Install– Air-Weigh's simple menu makes it easy to setup and calibrate your scale. Anyone can learn to use Air-Weigh scales in just a few minutes. Air-Weigh has both instructional cards and user guides available for training drivers on proper scale operation and installation.

Scale Kit includes LoadMaxx ComLink, display, interface power cable, air and deflection sensors. mounting brackets and installation guides.

FEATURES

- Measures and displays steer, drive, lift axle weights along with GVW and Net Payload
- Warning and overweight alarm outputs
- J1708, J1939, and RS-232 interfaces
- Dual point calibration
- 3 year limited warranty

Air-Weigh[®]

To Order - Toll Free: 1-888-459-3444
Main Office and International: 1-541-343-7884
Website: www.Air-WeighScales.com

Customer Support: 1-888-459-3247

1730 Willow Creek Circle
Eugene, Oregon 97402 USA

All rights reserved. Contents accurate at time of publication. © 2003