

Air-Weigh

Printer Kit 000-5898-005 with Power Inverter



This kit requires installation of a printer cable, which connects from the ComLink to the dash.

NOTE: For connection to a 5700/5750 series scale display, additional cable parts – C153 and 014-0225-025 – are also needed. Some previous printer installations may already have the 014-0225-025 cable. The other cables provided in the printer kit are not used. 5780 displays do not send out printer information, and therefore use the printer cables that connect to the ComLink.

To install the 2-part printer cable:

1. **Drill a 3/4" hole in the dash.**
2. **Unscrew the hex nut from the round 9-pin connector end of cable 014-0400-037 and remove at cable end.**
3. **Push connector through the hole in the dash from the front and slide hex nut back on to cable end. Fasten hex nut securely from inside the dash.**
4. **Connect the 4-pin Molex connector to the comlink in port labeled PRINTER RS232 PORT.**
5. **Connect the 25-pin connector of cable 014-0800-033 to the printer, and the round 9-pin connector to the dash connection.**

After powering up the printer, test the print output:

Press ESC until VIEW WEIGHTS is flashing.

Down arrow to PRINT/SETUP and press ENTER

PRINT REPORT is flashing, press ENTER

"Report in progress" will display on the screen briefly as print output is generated.

Time and date must be filled in manually in the space provided.

Air-Weigh


Printer Kit 000-5898-005 with Power Inverter

To open printer for paper roll replacement and cartridge change:



Replacement paper roll
PN 010-5783-000

Drop paper into slot with tail hanging towards the front, and close printer

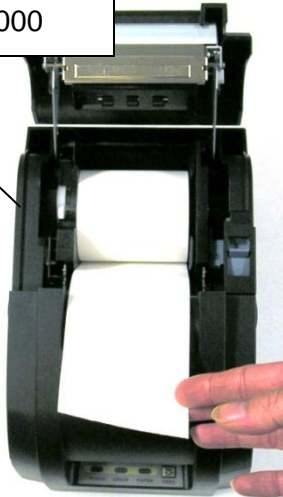

Printer ink cartridge
PN 010-5784-001



Lift cartridge here to remove and replace